

Operation instruction



IFLY_FirmWare
fw32262

1. After you download the RAR (Roshal A Rchive), you will see the file



IFLY_FirmWare
fw32262

2. Open the file



IFLY_FirmWare
FW32262



IFLYTools1.7



dotNetFx40_Full_...
Microsoft .NET F...
Microsoft Corpor...



Operation
instruction.pdf
Adobe Acrobat Do...

File instruction:



IFLY_FirmWare
FW32262

: firmware 32262



IFLYTools1.7

: IFLYTools 1.7



dotNetFx40_Full_...
Microsoft .NET F...
Microsoft Corpor...

: an important file which have to install on the computer



Operation
instruction.pdf
Adobe Acrobat Do...

: Operation instruction



IFLY_FirmWare
FW32262

3. Open the file



IFLY4_-C4E PWM
10A_DefParamet...
文本文档



IFLY-4 I2C
_DefaultParamete...
文本文档




IFLYFirmware3226...
FW 文件
45 KB



IFLY4_-C4E PWM
10A_DefParamet...
文本文档

: Parameter for new ESC (with heat sink)

The new ESC (with heat sink):

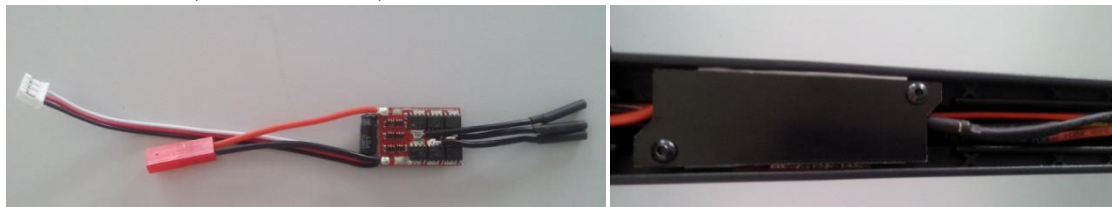

IFLY-4 I2C
DefaultParamete...
文本文档

: Parameter for the earliest ESC (without heat sink)

The earliest ESC (without heat sink):



IFLYFirmware3226...
FW 文件
45 KB

: Firmware 32262



IFLYTools1.7

4. Open the file



File instruction:



IFlyTools.exe
IFLYTools
www.idea-fly.com

: IFLYTools 1.7




IFLYTools
manual.pdf
Adobe Acrobat Do...

: IFLYTools manual in English




IFLYTools说明.pdf
Adobe Acrobat Do...
1,033 KB


: IFLYTools manual in Chinese

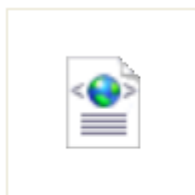

Language.xml

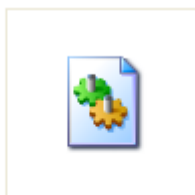

Microsoft.Expression...

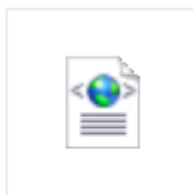


Microsoft.Expression...

: other files, which could be ignored, but can't be

deleted.


5. The process of firmware upgrade

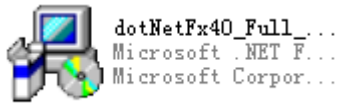

1) Install the file



2) Open IFLYTools

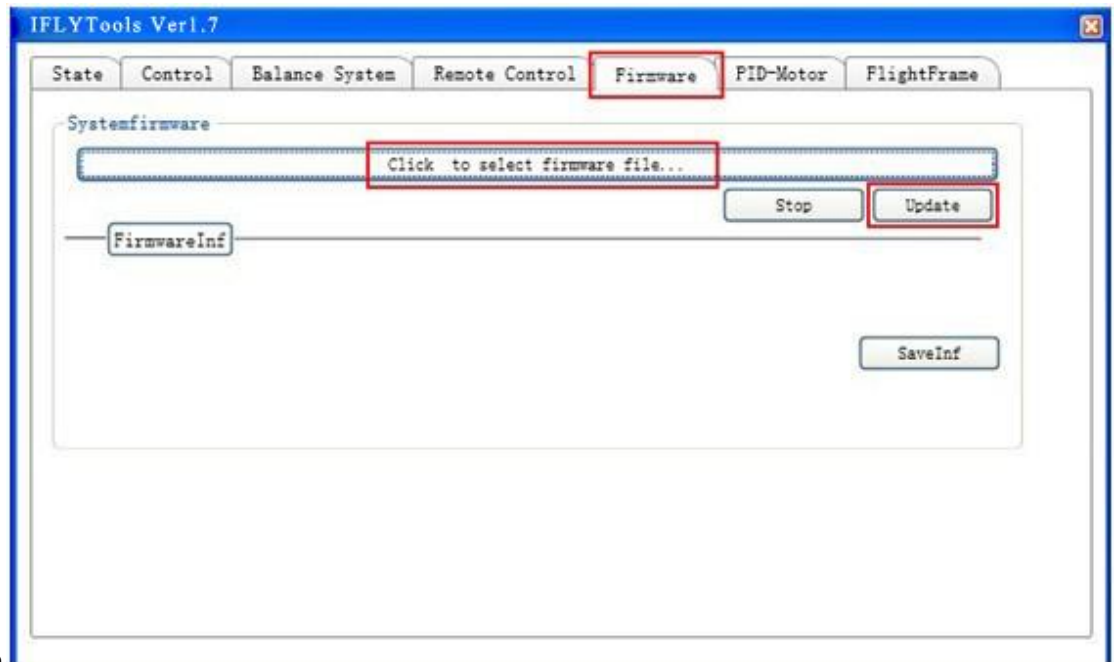

3) Upgrade firmware

4) Import the parameter